


規制番号 名称		07-0578	箕沖町水ヶ浦		運 用	H25年11月 8日	製造番号	130334	
制御機機種		交通信号制御機		TSC-3111		開始日時	16 時 23分 ~	製造年月	2013年9月
警交仕規1012号		製作所	住友電工システムソリューション(株)		作動時間	6:00～22:00以後閃光		施工会社	メディアテックー心
署別	福山東	付加機能	UCサイズ, 最大12出力16階梯, 系統						

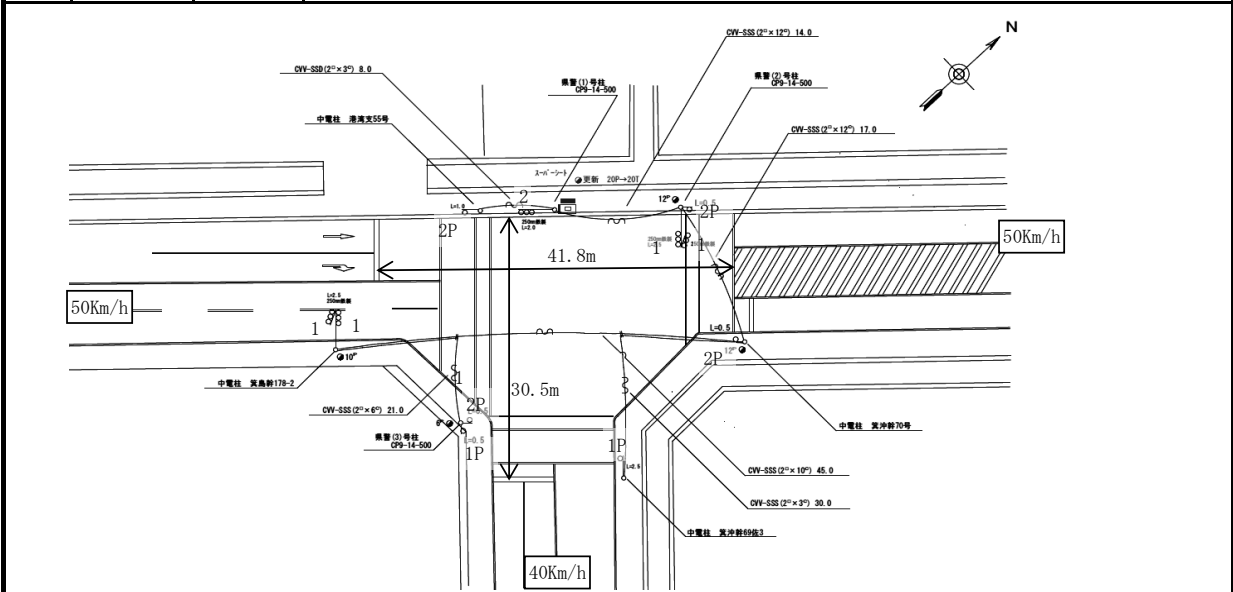

ステップ番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ステップ名称	1PG	1PW	1 G	1 Y	1 R	2PG	2PW	2 G	2 Y	2 R										
流動図																				
	1P [1P]																			
1 [1V]																				
2P [2P]																				
2 [2V]																				
パターン																			周期	オフセット
保安	47	5	2	3	3	25	7	2	3	3									100	/
P0																				/
P1	22	5	2	3	3	20	7	2	3	3									70	0
P2	42	5	2	3	3	20	7	2	3	3									90	0
P3	47	5	2	3	3	25	7	2	3	3									100	90
P4	52	5	2	3	3	30	7	2	3	3									110	0
P5	58	5	2	3	3	34	7	2	3	3									120	0
P6	64	5	2	3	3	38	7	2	3	3									130	0
P7	70	5	2	3	3	42	7	2	3	3									140	0
P8	76	5	2	3	3	46	7	2	3	3									150	0
P9	82	5	2	3	3	50	7	2	3	3									160	0
PA	89	5	2	3	3	53	7	2	3	3									170	0

備考: P0 はAプロのみ設定。

[illegible]